

User Manual

Blueair Sense

Contents

2	Welcome
3	Getting started
5	Getting the most from your Blueair system
6	Changing the filter
7	Filters

Welcome

Thank you for choosing Blueair. Before you start using your Blueair air purifier, take a few minutes to become familiar with the basics.

[Filter replacement](#)

Be sure to change your Blueair filter according to the recommended filter replacement schedule. This helps keep your Blueair air purifier running in top condition. See page 7.

[Extend your warranty](#)

Complete and send your warranty card to Blueair today to extend your limited warranty.

[Help keep the planet healthy, too](#)

Blueair air purifiers provide maximum improvement of indoor air quality with minimum impact on the environment. The entire unit can be recycled.

Getting started

General safety instructions

The Blueair Medineed air purifier is an electrical appliance. Please read the safety instructions before use and take the necessary precautions to reduce the risk of fire, electric shock or injury. **The Blueair Limited Warranty applies only if the unit is used according to these instructions.**

- Use the grounded power cable provided with your Blueair unit. The plug fits into a grounded outlet. Do not alter the plug in any way.
- Use the cable provided to plug the Blueair unit directly into an appropriate electrical outlet (please refer to the voltage label on your unit). The cable is packaged beneath the unit.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.

Placement

Place the unit in a location that allows air to circulate freely in, out and around the unit. The minimum acceptable distance from another object is 4" or 10 cm. Use only genuine Blueair filters. **Do not place the unit:**

	Directly on or against soft furnishings, such as bedding or curtains.
	Near sources of heat, such as radiators, fireplaces or ovens.
	Near wet areas, such as bathrooms or laundry rooms, where it may come into contact with water.
	Outdoors.

Settings

Plug the power cable firmly and completely into the recessed power cord socket located at the bottom of the unit and plug the other end into a grounded wall outlet or power strip.

Turn on your Blueair unit by sweeping your hand over the display, which is positioned in the center of the top. The blue light-emitting diode on the unit's front side indicates that the unit is working.

Set the unit to maximum speed by sweeping over the display until it shows three blue rings. This is recommended for fast initial cleaning, daytime use, or very polluted air. After a few minutes, set the unit to the desired speed. Minimum speed is generally recommended for nighttime use.


Display function



Display is on standby for energy saving.




Speed setting 3.

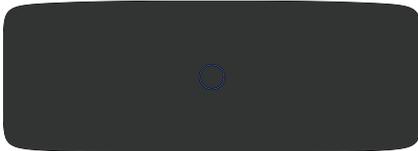

Speed setting 1.



When filter replacement is required, a red replacement filter light will light up.

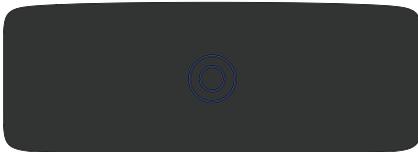

Speed setting 2.

How it works

Air is drawn in to the air purifier where airborne particles and gaseous pollutants are captured in the HEPASilent Plus™ pre-filter. The air then passes through an ion chamber and remaining particles are charged with negative ions. The charged particles are drawn to the HEPASilent Plus™ filter surface and purified air, virtually contaminant-free, is re-circulated into the room.

Care and maintenance

Blueair air purifiers feature high quality design, materials and workmanship. To keep your unit in top condition, we recommend routine cleaning. The appliance must be disconnected from the supply mains before cleaning or maintenance.

- Vacuum the air intake grille from the inside when you remove the filter to replace it.
- Vacuum the small inlets with a soft brush attachment.
- Wipe the exterior of the unit with a soft, clean, damp cloth.
- Never clean with gasoline, chemical solvents or corrosive material also as these agents may damage the surface.
- Do not allow foreign objects to enter the ventilation or exhaust openings. This may cause electric shock or damage the unit.
- Do not try to repair or adjust any of the electrical or mechanical functions on your Blueair unit yourself. Contact your local dealer or Blueair for warranty information.

Getting the most from your Blueair system

The Blueair system is easy to use. Make sure your unit is the right size for your room, and change the filter according to the recommended filter replacement schedule. Remember that, just as air conditioners and heaters have limits to the volume of air they can cool or heat, every air purification system has limits to the volume of air it can clean. Follow these common-sense guidelines.

Close your windows

You wouldn't throw open your windows on a hot summer day and expect your air conditioner to work efficiently, because you can feel the hot air coming in and the cool air going out. Even though you can't see the contaminated air coming in and the clean air going out, the same logic applies to your air purifier.

Close your doors, too


Just as you might seal off part of your house on a cold winter night to keep your heater working more efficiently, seal off the room in which your system is working for best results. This is especially important for people using a Blueair system to ease nighttime asthma or allergy attacks.

Run your system 24 hours per day

For best results, run your Blueair unit 24 hours a day, 7 days a week. Round-the-clock operation ensures that a continuous supply of clean, filtered air constantly circulates throughout the room. Blueair systems are designed for phenomenally low power usage. In fact, it costs about the same to power a Blueair air purifier as it does to power a single light bulb, depending on the unit and the operating speed.


Changing the filter

Step 1

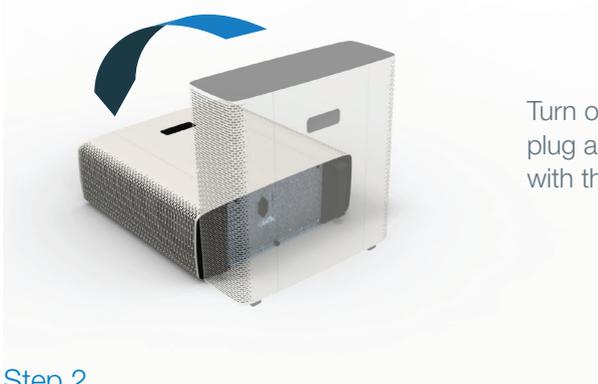


Turn off the unit, pull out the plug and put the unit down with the backside facing up.

Step 2

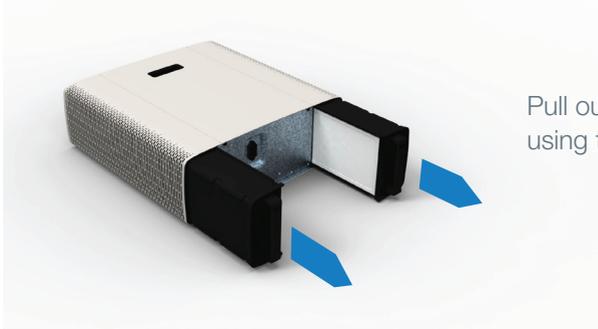


Pull out the filter cassettes using the handles.

Step 3

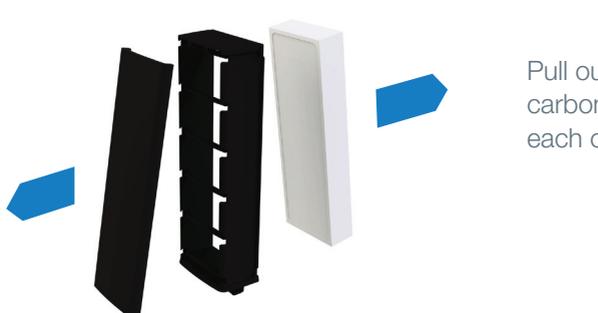

Pull out the particle filters and carbon filter sheets from each cassettes.

Step 4

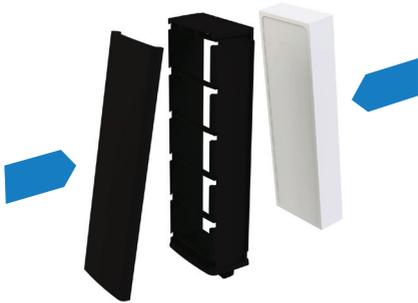


Push in the new filters in each cassettes.

Step 5




Make sure that the carbon filter sheets stay in place by pressing down the filters below the tags on the cassettes.

Step 6

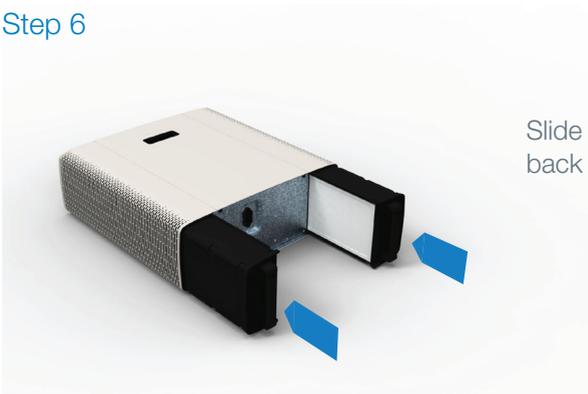

Slide in the filter cassettes back in place

Step 7

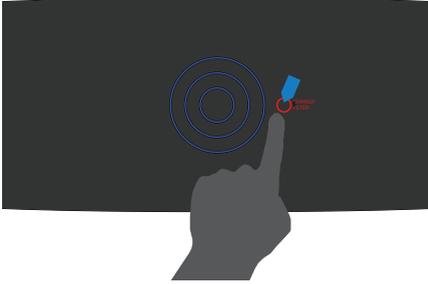

Plug in the power cord, stand the unit up and touch the red filter replacement light. Your Blueair is now ready to once again give you cleaner, healthier air.

Filters

Patented HEPASilent Plus™ technology makes the Blueair Sense incredibly quiet. The unit comes with HEPASilent Plus™ filters already installed, including one prefilter and one main filter.

Pre-filter. The pre-filter removes dust, pollen, pet dander and other large airborne particles.

Main filter. This filter removes all airborne pollutants including dust, pollen, pet dander, bacteria, mold spores, viruses and other airborne particles. The filter is made of polypropylene, which help mechanically filter out airborne particles. To maximize filter effectiveness, particles are negatively charged by the Blueair unit before reaching this filter.

The filters also include active carbon filter sheets to remove gaseous pollutants such as cigarette and cigar smoke or other VOCs (volatile organic compounds, including household paints and other chemicals).

For optimal performance, Blueair recommends that you replace the filter every six (6) months.

We offer a convenient Filter Subscription Program in some countries. Contact your local dealer or Blueair to find out whether the program is available to you.

IMPORTANT! Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.

Customer's record

The model number and serial number of this product can be found on the bottom of the unit. Please note them in the space provided below and keep for future reference.

Model number	Dealer's name
Serial number	Dealer's address
Date of purchase	Telephone number

Our philosophy

Blueair was founded on the belief that everyone should be able to enjoy clean air indoors, at home or in the workplace. We have become a global authority on how to remove indoor air impurities down to the tiniest particle thanks to our deep commitment to research and innovation. Our healthier air solutions work to clean more air faster, whisper quietly and using little energy, removing allergens, asthma triggers, viruses, bacteria and other airborne pollutants.

The Blueair Sense. Innovated with love in Sweden to deliver cleaner, healthier indoor air because we believe passionately that clean air is a basic human right.

www.blueair.com

Blueair Inc.

17 N. State, Suite 1830, Chicago, IL 60602
Phone: (888) blueair (1-888-258-3247), Fax: (312) 727-1153
info@blueair.com www.blueair.com

Blueair AB

Danderydsgatan 11, SE-114 26 Stockholm, Sweden
Tel: +46-8-679 45 00, Fax: +46-8-679 45 45
info@blueair.se www.blueair.com

